

International Standard Electronic Heating

Thermostat Characteristics:

Mounted on the surface of the wall indoors
 Temperature control range $+5/+40$
 Applied in the auto-control system of space heating
 LED turned on while heating
 Satisfying the requirements of safety, energy saving and comfort.

Types Table :

Types	Load Current	Methods of Temperature Measurement	Applications
V5.03	3A	Outside Sensor	Heating cable and other power heat loads
V5.03I		Inside Sensor	
V5.03D		Outside & Inside Sensors	
V5.16	16A	Outside Sensor	
V5.16I		Inside Sensor	
V5.16D		Outside & Inside Sensors	

Technique Parameters

Voltage: 220VAC


Power consumption: 5VA

Temperature control range: $5\sim 40$ Temperature limit range: $25\sim 55$ Power save mode temperature: 5 Temperature deviation: $\pm 0.5K$ Ambient temperature: $-5\sim 50$

Degree of protection provided by enclosure: IP20

Outer sensor: length of cable 3m

Specification :

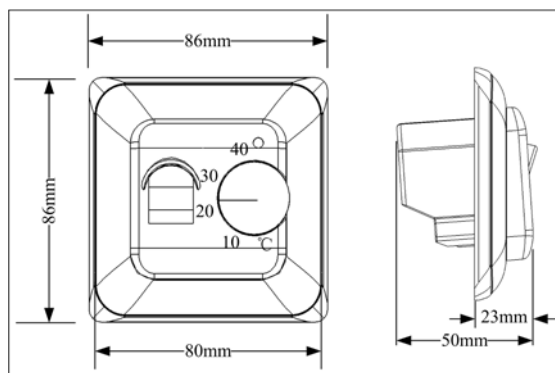

Mounting of Outer Sensor :

Please place the casing under the floor with the sensor in, the terminal of which should be thickened and placed on the top of the concrete layer. Sensor cable can be extended to 50m with other cables if necessary. If multi-core cable is used as extended cable, extra cable core should not be used for power

supply (e.g. power supply for heating cable) for avoiding the interference of voltage signal to the heating thermostat. If there is shielded cable in the extended cable, shielded cable should not be connected to ground but to terminal 7. It is recommended that the extended cable and casing should not be shared with others.


Outer sensor and its resistance:

Temperature(°C)	Resistance(Ω)
5	22070
10	17960
20	12091
30	8312
40	5827

Mounting Location Recommended:

The heating thermostat should be mounted on the wall with air flowing freely around.

Warning: The mounting location should not be influenced by other heat source (e.g. sunlight), air flow through doors & windows or temperature of outer wall.

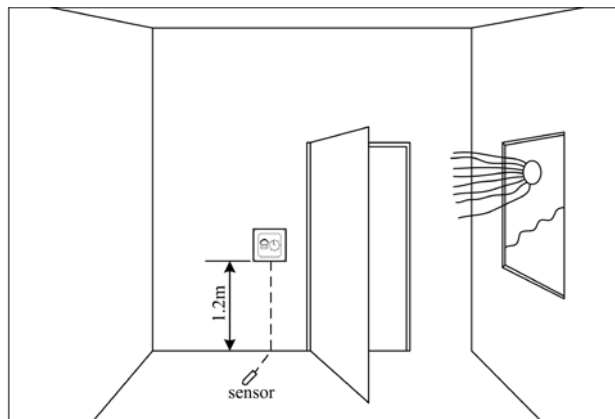


Temperature Set :

The factory default of temperature control range is $5/+40^{\circ}C$. For convenient adjusting the LED will be turned on while heating. For the first use, please set the thermostat at the highest temperature, when the room or floor temperature approaches the expected, please turn the knob back until the LEDs turned off. One or two days after, user could do fine tuning if necessary.

Handling Instruction :

- ① on and off :
| on ○ off
- ② temperature set
 $5\sim 40^{\circ}C$
- ③ indicator :
LED turned on while heating.

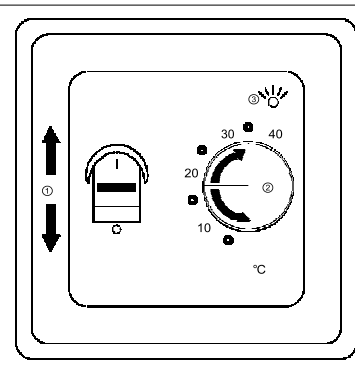

Temperature Calibrating :

When indoor temperature reaches steady state, use could calibrate the heating thermostat to make the temperature reading be the same as the real room temperature., Calibration Operation Procedures:

- Measure the temperature with thermometer;
- Remove the control knob;
- Rotate the adjuster bar D (shown in Fig.2) until the LED is turned off;
- Install the control knob and make the temperature reading be the same as the real temperature.

Warning : Please do not rotate the control knob since the factory default has been calibrated !

Restriction of Control Knob Adjusting Range :

The lock mechanism under the control knob can be used to restrict the adjusting temperature range. User can lock the adjusting range (e.g. 20-25) as long as loosening the screw C (shown in Fig.2). The top adjusting ring can restrict the maximal temperature, and the under one can restrict the minimal temperature.

Figure.1

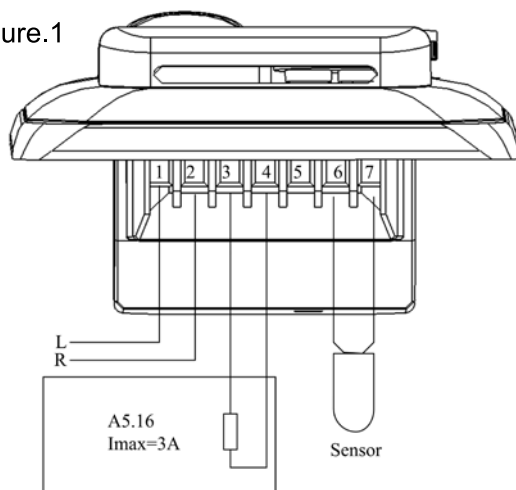


Figure.2

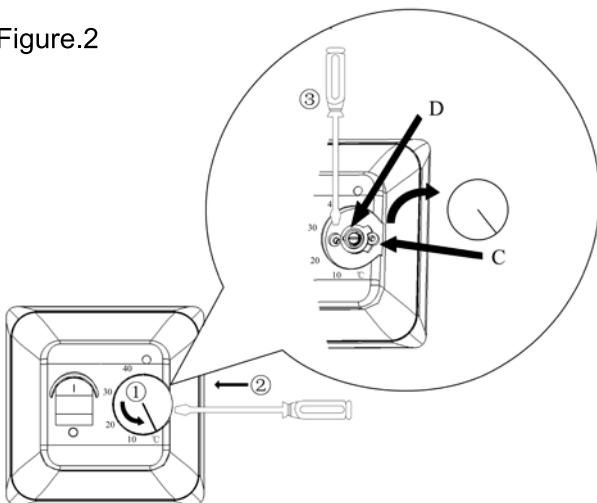


Figure.3



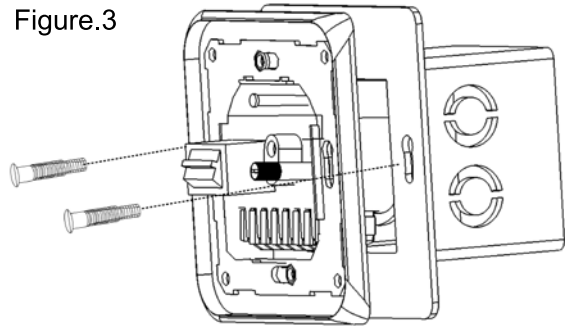


Figure.4

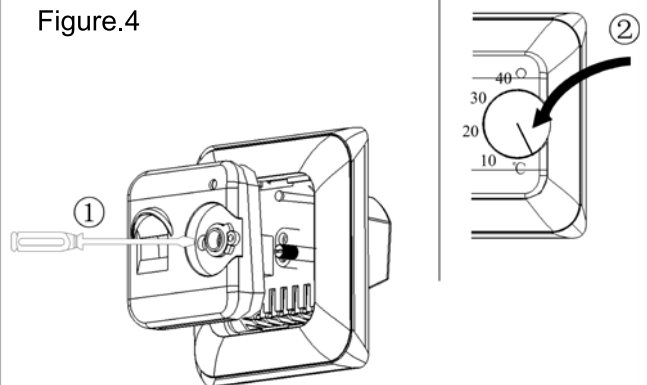

Component Name

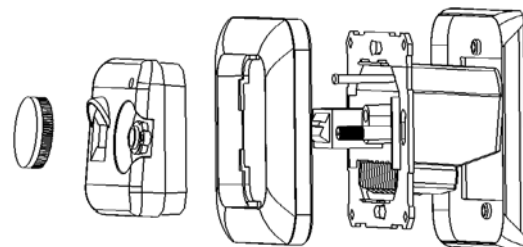

Knob Panel Inner frame Base Outer frame